

Installation, Operation
and Maintenance manual



DOMO, DOMO GRI

Submersible pump units

Table of Contents

1	Introduction and Safety	4
1.1	Introduction	4
1.2	Safety	4
1.2.1	Danger levels and safety symbols	4
1.2.2	User safety	5
1.2.3	Protection of the environment.....	6
1.2.4	Sites exposed to ionizing radiations.....	6
2	Handling and Storage.....	7
2.1	Handling of the packed unit	7
2.2	Unit inspection upon delivery.....	7
2.3	Unit handling	8
2.4	Storage	8
3	Technical Description	9
3.1	Designation	9
3.2	Denomination of the models.....	9
3.3	Data plate	9
3.4	Identification code	10
3.5	Names of the main components	11
3.6	Intended use.....	11
3.7	Improper use	11
4	Installation	13
4.1	Precautions	13
4.2	Mechanical installation.....	13
4.2.1	Installation area	13
4.2.2	Permitted positions	14
4.2.3	Permanent installation on support base	14
4.2.4	Permanent installation with quick coupling	14
4.3	Start and stop levels	16
4.4	Hydraulic connection	17
4.4.1	Guidelines for the hydraulic system	17
4.5	Electrical connection	18
4.5.1	Ground.....	19
4.5.2	Guidelines for electrical connection.....	19
4.5.3	Guidelines for the control electric panel.....	19
5	Use and operation	20
5.1	Precautions	20
5.2	Rotation direction check (three-phase motors)	21

5.3	Starting and stopping	21
6	Maintenance	22
6.1	Precautions	22
6.2	Maintenance every 6 months of operation	22
6.3	Long periods of inactivity.....	22
6.4	Spare parts ordering	22
7	Troubleshooting.....	23
7.1	Precautions	23
7.2	The unit does not start	23
7.3	The thermal overload protection triggers.....	23
7.4	The unit runs but there is little or no flow rate	24
7.5	The unit never stops	24
8	Technical Information	25
8.1	Applications.....	25
8.2	Operating environment	25
8.3	Maximum head.....	26
8.4	Maximum number of starts per hour.....	26
8.5	Mechanical characteristics	26
8.6	Electrical specifications	27
8.7	Sound pressure	27
8.8	Dimensions and weights.....	27
9	Disposal.....	30
9.1	Precautions	30
10	Declarations.....	31
10.1	EC Declaration of Conformity (Original).....	31
10.2	EU Declaration of Conformity (n. EMCD30).....	31
11	Warranty	32
11.1	Information	32

1 Introduction and Safety

1.1 Introduction

Purpose of this manual

This manual provides information on how to do the following in the correct manner:

- Installation
- Operation
- Maintenance.



CAUTION:

This manual is an integral part of the unit. Make sure to have read and understood the manual before installing the unit and putting it to use. The manual must always be made available to the user, stored in the proximity of the unit, and well kept.

Supplementary instructions

The instructions and warnings of this manual apply to the standard unit as described in the sale documentation. Special version pumps may be supplied with supplementary instruction manuals. For situations not considered in the manual or in the sales document, contact Xylem or the Authorised Distributor.




1.2 Safety

1.2.1 Danger levels and safety symbols







Before using the unit, the user must read, understand and comply with the indications of the danger warnings in order to avoid the following risks:

- Injuries and health hazards
- Damage to the product
- Unit malfunction.

Danger levels

Hazard level	Indication
 DANGER:	It identifies a dangerous situation which, if not avoided, causes serious injury, or even death.
 WARNING:	It identifies a dangerous situation which, if not avoided, may cause serious injury, or even death.
 CAUTION:	It identifies a dangerous situation which, if not avoided, may cause small or medium level injuries.
NOTICE:	It identifies a situation which, if not avoided, may cause damage to property but not to people.

Complementary symbols

Symbol	Description
	Electrical hazard
	Hot surface hazard
	Danger, system pressurized
	Do not use flammable liquids
	Do not use corrosive liquids
	Read the instruction manual

1.2.2 User safety

Strictly comply with current health and safety regulations.

**WARNING:**

This unit must be used only by qualified users. Qualified users are people able to recognise the risks and avoid hazards during installation, use and maintenance of the unit.

Inexperienced users

**WARNING:**

- For EU countries: this product may be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or who lack experience and knowledge, provided that they are being supervised and have been instructed on how to use it safely, and understand the hazards involved. Children must not play with the product. Cleaning and maintenance must not be carried out by children without supervision.
- For countries outside the EU: this product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or who lack experience and knowledge, unless they are being supervised and have been instructed on how to use it by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.

1.2.3 Protection of the environment

Disposal of packaging and product

Comply with the current regulations on sorted waste disposal.

Leaking of fluid

The unit contains a small quantity of lubricant oil: always put in place the necessary measures to ensure that any spilled lubricant does not disperse in the environment.



WARNING:

It is prohibited to dispose of lubricating fluids and other hazardous substances in the environment.

1.2.4 Sites exposed to ionizing radiations



WARNING: Ionizing radiation hazard

If the unit has been exposed to ionizing radiations, implement the necessary safety measures for the protection of people. If the unit needs to be despatched, inform the carrier and the recipient accordingly, so that appropriate safety measures can be put in place.

2 Handling and Storage

2.1 Handling of the packed unit



WARNING: Crushing hazard (limbs)

The unit and its components may be heavy: risk of crushing.



WARNING:

Always wear personal protective equipment.



WARNING:

Check the gross weight marked on the packaging.



WARNING:

Handle the unit in compliance with the current regulations on "manual load handling", to avoid undesirable ergonomic conditions causing risks of back-spine injury.



WARNING:

Take appropriate measures during transport, installation and storage to prevent contamination from external substances.

The Manufacturer delivers the unit and its components in a cardboard box.

2.2 Unit inspection upon delivery

Inspect the package

1. Check that quantity, descriptions and product codes match the order.
2. Check the packaging for any damage or missing components.
3. In case of immediately detectable damage or missing parts:
 - accept the goods with reserve, indicating any findings on the transport document, or
 - reject the goods, indicating the reason on the transport document.

In both cases, promptly contact Xylem or the Authorised Distributor from whom the product was purchased.

Unpacking and inspection of the unit



CAUTION: Cut and abrasion hazard

Always wear personal protective equipment.

1. Remove packing materials from the product.
2. Check the unit for integrity and to make sure that there are no missing components.
3. In case of damage or missing components, promptly contact Xylem or the Authorised Distributor.

2.3 Unit handling

Lift the unit using the handle.



DANGER: Electrical hazard

Holding the unit by the supply cord or the float switch is strictly forbidden.



WARNING:

During handling, make sure to avoid injury to people and animals, and/or damage to property.

2.4 Storage

Storage of the packed unit

The unit must be stored:

- In a covered and dry place
 - Away from heat sources
 - Protected from dirt
 - Protected from vibrations
 - At an ambient temperature down to -30°C (-22°F), and relative humidity between 5% and 95%.
-

NOTICE:

Do not place heavy loads on top of the unit.

NOTICE:

Protect the unit from collisions.

Long-term storage of the unit

1. Completely empty the unit manually by tilting it towards the discharge port.
2. Follow the same instructions for the storage of the packed unit.

For further information about preparation for long-term storage, please contact Xylem or the Authorised Distributor.

3 Technical Description

3.1 Designation

Submersible pump units for draining wastewater.

3.2 Denomination of the models

Series	Description
DOMO	Submersible pump units for draining wastewater with two-channel or vortex (DOMO VX) impeller
DOMO GRI	Submersible pump units for draining wastewater with grinding system

3.3 Data plate

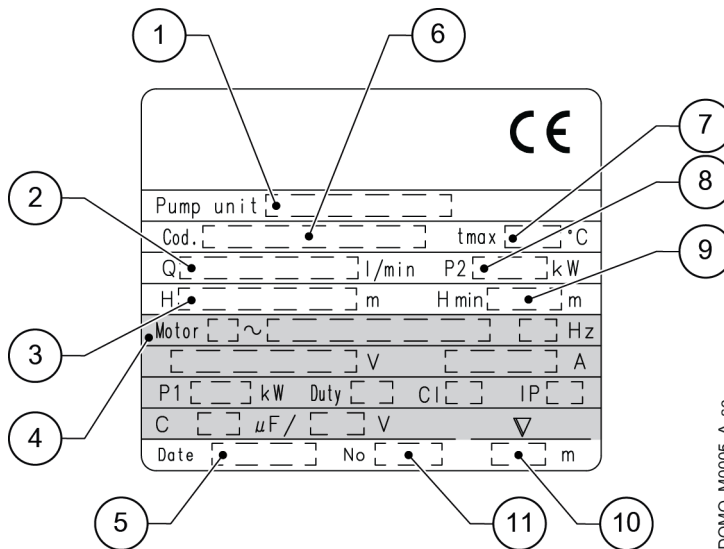


Figure 1: Single-phase

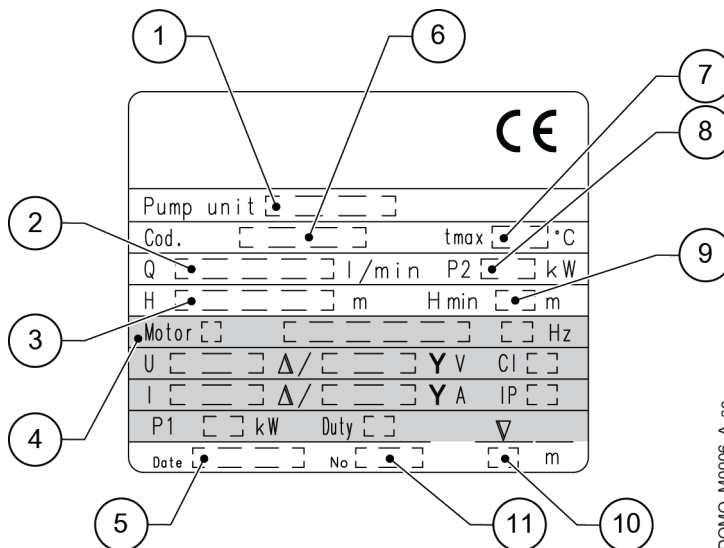


Figure 2: Three-phase

Position number	Description	Position number	Description
1	Model	7	Maximum liquid temperature
2	Flow rate range	8	Rated output
3	Head range	9	Minimum head
4	Motor data	10	Maximum immersion depth
5	Manufacturing date	11	Serial number
6	Pump unit code		

3.4 Identification code

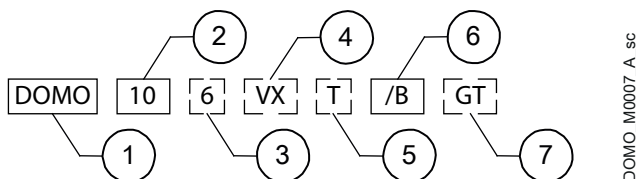


Figure 3: DOMO

Position number	Description	Notes
1	Series name	
2	Rated output	HP x 10
3	Frequency	Empty = 50 Hz 6 = 60 Hz
4	Impeller type	Empty = two-channel VX = vortex
5	Phase	Empty = single phase T = three-phase
6	Version	
7	Float switch	Empty = with float GT = with tube float SG = without float


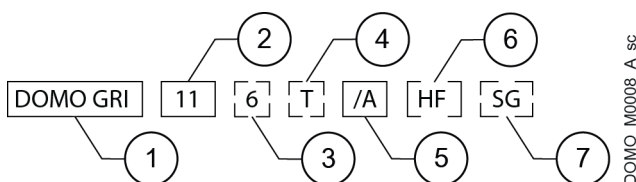


Figure 4: DOMO GRI

Position number	Description	Notes
1	Series name	
2	Rated output	HP x 10
3	Frequency	Empty = 50 Hz 6 = 60 Hz
4	Phase	Empty = single phase T = three-phase
5	Version	
6	Flow	Empty = standard HF = high flow rate
7	Float	Empty = with float SG = without float

3.5 Names of the main components

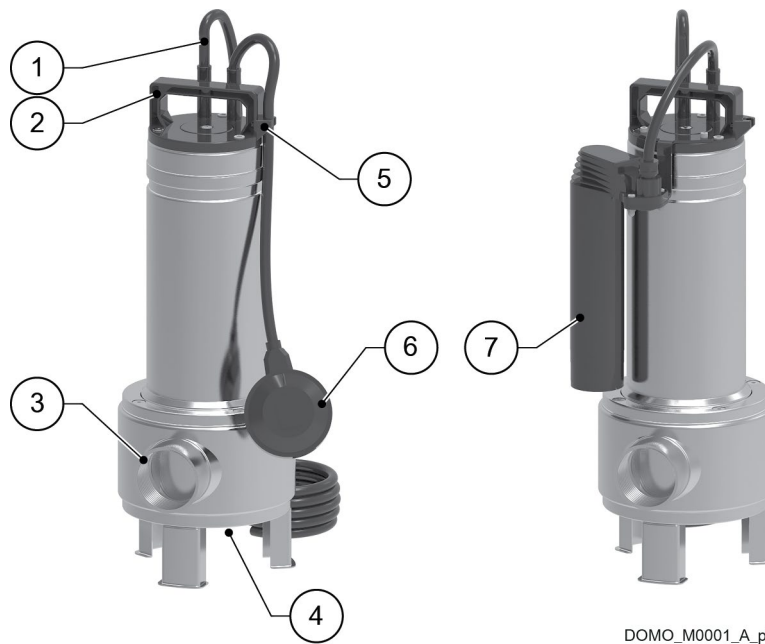

DOMO_M0001_A_ph

Position number	Description	Position number	Description
1	Supply cord	5	Cable stop
2	Handle	6	Float
3	Discharge port	7	Tube float (DOMO GT)
4	Suction port		

3.6 Intended use

Pumping of wastewater, including with a limited quantity of suspended filaments or solids. Observe the operating limits in **Technical Information** on page 25.

Pumped liquids

- Clean water
- Wastewater and sewage water
- With suspended solids
- With suspended filaments
- Chemically and mechanically non aggressive
- Non flammable and/or explosive.

3.7 Improper use



WARNING:

The unit was designed and built for the use described in the Intended Use section. Any other uses are prohibited, as they could compromise the safety of the user and the efficiency of the unit itself.



DANGER:

It is prohibited to use this unit to pump flammable and/or explosive liquids.



DANGER: Potentially explosive atmosphere hazard

It is prohibited to start the unit in environments with potentially explosive atmospheres or with combustible dusts.



DANGER: Electrical hazard

Do not use the unit in swimming pools or similar places when people are inside.

Examples of improper use

- Pumping liquids not compatible with the construction materials of the unit
- Pumping liquids with temperatures higher than what shown in **Technical Information** on page 25
- Pumping hazardous, toxic, explosive, flammable or corrosive liquids
- Pumping sea water.

4 Installation

4.1 Precautions

Before starting, make sure that the safety instructions shown in **Introduction and Safety** on page 4 have been fully read and understood.



DANGER:

All the hydraulic and electrical connections must be completed by a technician possessing the technical-professional requirements outlined in the current regulations.



DANGER: Potentially explosive atmosphere hazard

It is prohibited to start the unit in environments with potentially explosive atmospheres or with combustible dusts.



WARNING:

Always wear personal protective equipment.



WARNING:

Always use suitable working tools.



WARNING:

When selecting the place of installation and connecting the unit to the hydraulic and electric power supplies, strictly comply with current regulations.

4.2 Mechanical installation

The unit may be used:


- with manual or automatic operation, for example connected to a level switch
- as mobile unit or in permanent installations, for example inside an existing tank or in a prefabricated lifting station.

Dedicated installation kits and lifting stations are available: Contact Xylem or the Authorised Distributor for further information.

4.2.1 Installation area

1. Follow the provisions in **Operating environment** on page 25.
2. Remove any solid sediments found.
3. If the unit is installed in a tank or a lifting station, check that their sizes are appropriate for the unit and that the perimeter is even and without obstacles.
4. If the unit is fitted with a float, check that the tank or lifting station sizes do not impair the free movement of the float.

4.2.2 Permitted positions

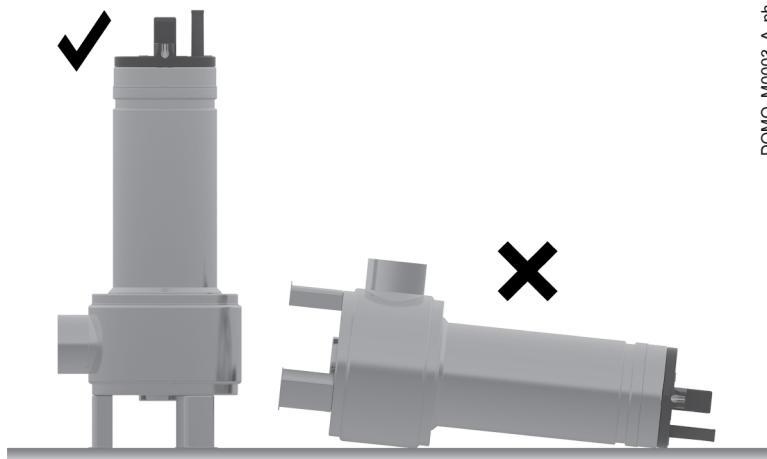

4.2.3 Permanent installation on support base

1. Check that the bottom is solid, and if possible even.
2. Connect a 90° rigid or flexible elbow pipe to the discharge port (see **Hydraulic connection** on page 17).
3. Submerge the unit in the liquid.

4.2.4 Permanent installation with quick coupling

The unit can be installed inside a tank or lifting station using the quick coupling descent kit (optional).



DANGER: Electrical hazard

Holding the unit by the supply cord or the float switch is strictly forbidden.



NOTICE:

In the operating position, the unit, the piping, the electric supply cord and the support chain must never be in contact with the walls of the tank.

See the figure below.

1. Secure the guide pipe supports and the foot:
 - a) In case of tanks with loose or irregular bottom, install a solid foot base, as horizontal and flat as possible.
 - b) Temporarily secure the pipe support to the edge of the tank using 2 dowels.
 - c) Place the foot at on the bottom, ascertaining the correct position with a plumb line, using the tube support as reference.
 - d) Secure the foot to the bottom with 4 dowels.
 - e) Attach the discharge pipe to the foot (see **Hydraulic connection** on page 17).
2. Complete the installation of the kit:
 - a) Insert the guide tubes in the foot.
 - b) Cut the top ends of the pipes so that they coincide with the support.
 - c) Unscrew the pipe support.
 - d) Insert the sliding bracket in the pipes.
 - e) Insert the support at the top end of the pipes.
 - f) Permanently secure the support to the tank wall.

3. DOMO GRI series only:
 - a) Remove one of the three support feet by unscrewing the M8x25 screw.
 - b) Re-tighten the screw.
Tightening torque: 13 Nm (115 lbf·in).
 - c) Repeat a) and b) for the other two feet.
4. Install the unit:
 - a) Screw the discharge port to the sliding bracket, placing the seal included in the kit between the two.
 - b) Attach the chain to the handle.
 - c) Slide the sliding bracket through the guide pipes and lower the unit in the tank, supporting it with the chain until the end.
 - d) Attach the end of the chain to the edge of the tank.
 - e) Secure the supply cord to the edge of the tank with a stop.

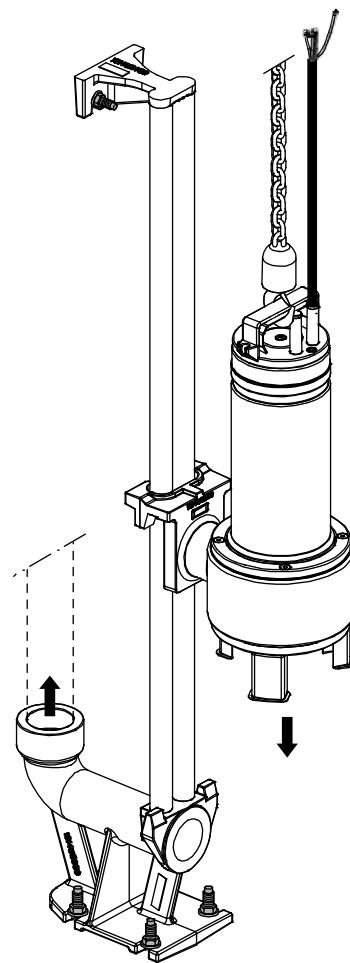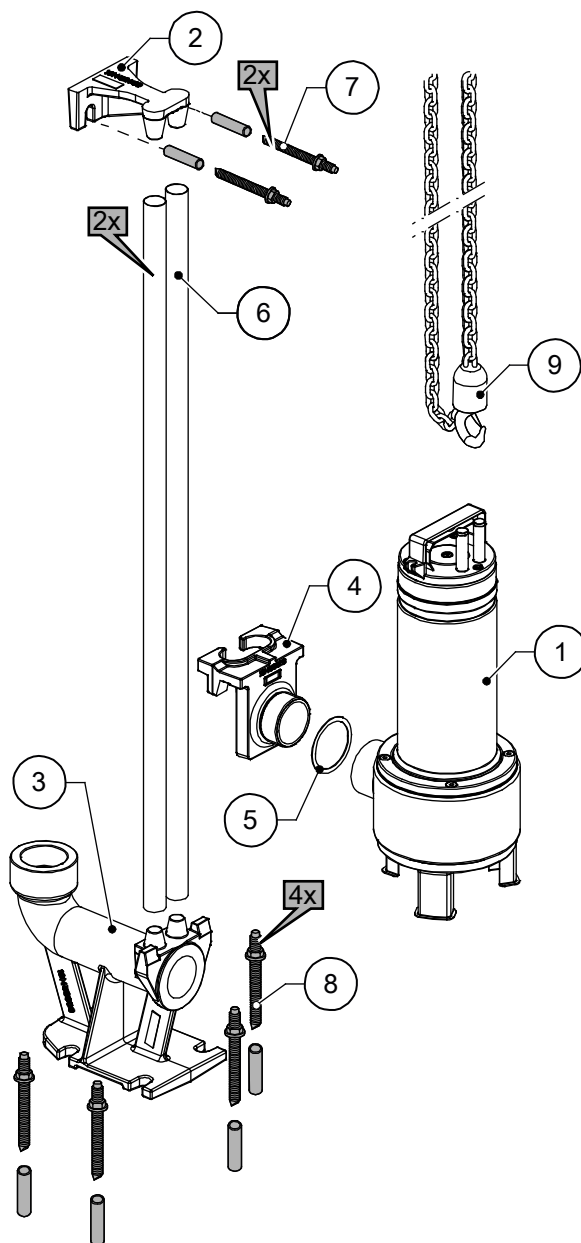

DOMO_M0002_A_de

Position number	Description	Position number	Description
1	Unit	6	Corrosion resistant metal guide pipes, diameter 3/4", length exceeding the tank depth
2	Guide pipe support	7	Dowels
3	Foot	8	Dowels
4	Sliding bracket	9	Corrosion resistant metal chain, capacity 500 kg (1100 lb), length exceeding the tank depth
5	O-ring		

4.3 Start and stop levels

The float switch controls the start and stop of the unit (intermittent operation).

NOTICE:


The unit may only operate for a few minutes while only partially submerged in the liquid, for example during emptying operations.

DOMO, DOMO VX, DOMO GRI

To adjust the level difference between start and stop, change the length of the float cable using the cable stop found on the handle:

- Short cable: decrease the distance between minimum and maximum level, more frequent starts and stops.
- Long cable: increase the distance between minimum and maximum level, less frequent starts and stops.


The figure shows the minimum (H1) and the maximum (H2) permitted levels for operation depending on the model.

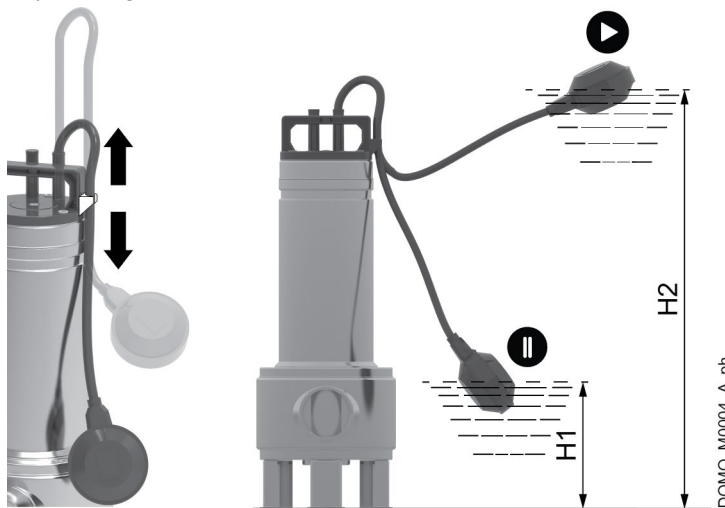

Series	Model	H1, mm (in)	H2, mm (in)
DOMO	7, 7VX	155 (6.1)	375 (14.8)
	10, 10VX, 15, 15VX	155 (6.1)	420 (16.5)
DOMO GRI	11/A	129 (5)	394 (15.5)
	11HF	131 (5.2)	396 (15.6)
	15	149 (5.9)	414 (16.3)

DOMO GT

The level difference between start and stop cannot be adjusted.
The figure shows the minimum permitted level for operation (H1) depending on the model.

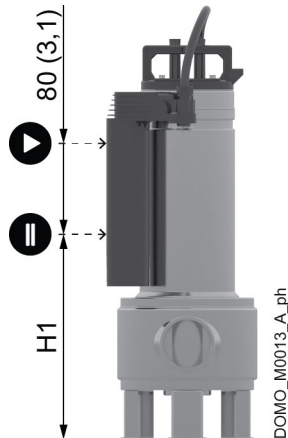

Model	H1, mm (in)
7 GT, 7VX GT	225 (8.9)
10 GT, 10VX GT, 15 GT, 15VX GT	255 (10)

4.4 Hydraulic connection



DANGER:

All the hydraulic and electrical connections must be completed by a technician possessing the technical-professional requirements outlined in the current regulations.



WARNING:

Piping must be sized to ensure safety at the maximum operating pressure.




WARNING:

Install appropriate seals between the unit couplings and the pipings.

4.4.1 Guidelines for the hydraulic system

1. Attach the piping, rigid or flexible, to the discharge port.
2. Support the piping independently to prevent it from weighing on the unit.
3. Install a check valve on the piping, at least 1 m (3.3 ft) from the discharge port.
4. Install a gate valve downstream the check valve.
5. For units without float to be used for automatic operation, install a device stopping the unit when the liquid level reaches the minimum permitted limit, see **Start and stop levels** on page 16.

The figure shows a typical installation.

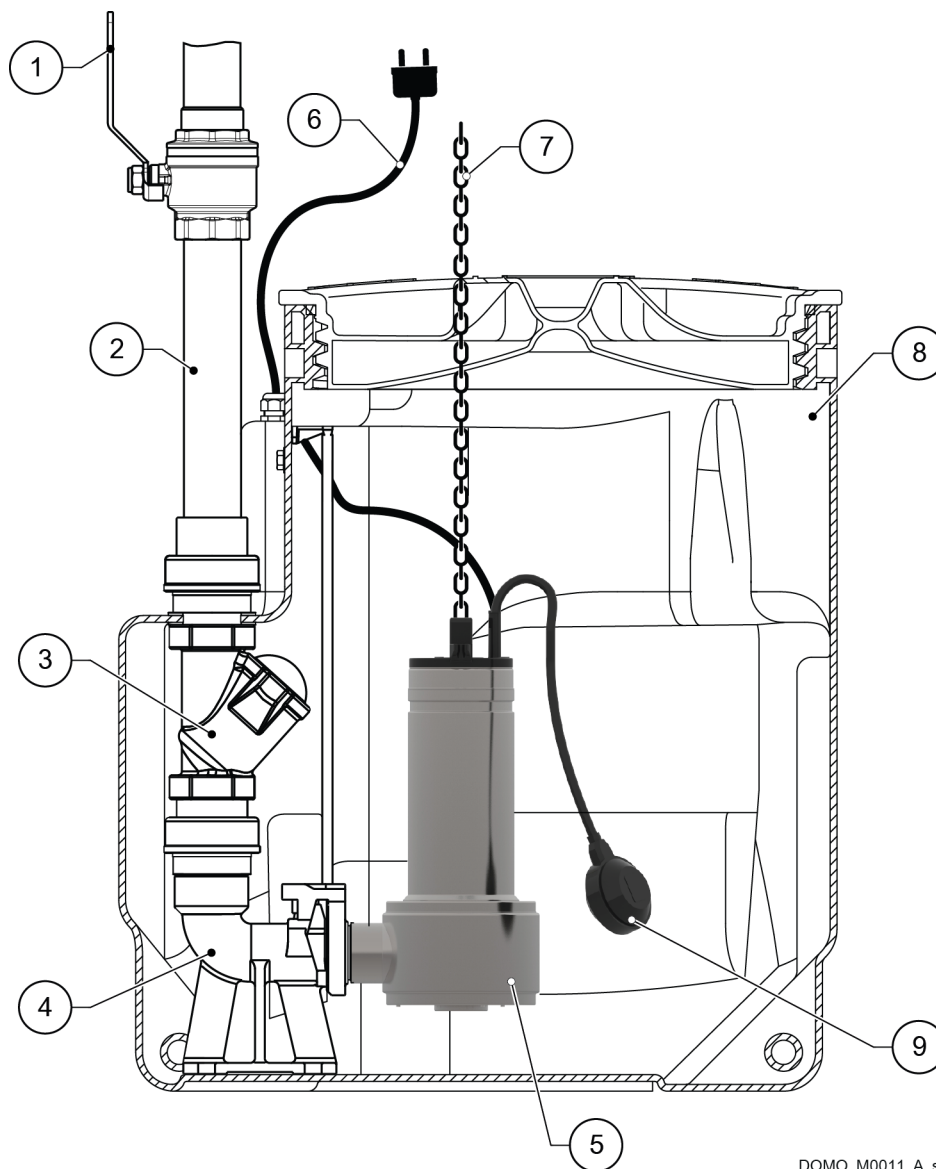

DOMO_M0011_A_sc

Position number	Description	Position number	Description
1	Gate valve	6	Electric supply cord
2	Discharge pipe	7	Chain
3	Check valve	8	Tank
4	Descent kit	9	Float
5	Unit		

4.5 Electrical connection



DANGER:

All the hydraulic and electrical connections must be completed by a technician possessing the technical-professional requirements outlined in the current regulations.



DANGER: Electrical hazard

Before starting work, check that the unit is unplugged and that the pump unit, the control panel and the auxiliary control circuit cannot restart, even unintentionally.

4.5.1 Ground



DANGER: Electrical hazard

Always connect the external protection conductor (ground) to the ground terminal before attempting to make any other electrical connections.



DANGER: Electrical hazard

Connect the pump unit and any electric accessories to a socket with protection conductor (ground).



DANGER: Electrical hazard

Check that the external protection conductor (ground) is longer than the phase conductors; In case of accidental disconnection of the unit from the phase conductors, the protection conductor must be the last one to detach itself from the terminal.



DANGER: Electrical hazard

Install suitable systems for protection against indirect contact, in order to prevent lethal electric shocks.

4.5.2 Guidelines for electrical connection

1. Check that:
 - The mains voltage and frequency match the specifications on the data plate
 - The supply cord is protected from high temperatures, vibrations, collisions and abrasions.
2. Check that the power supply line is provided with:
 - a short circuit protection device of appropriate size
 - a mains disconnection device with contact opening distance ensuring complete disconnection for overvoltage III category conditions
 - an RCCB earth leakage switch with tripping current < 30 mA.

4.5.3 Guidelines for the control electric panel

NOTICE:

The electric panel must match the ratings on the unit data plate. Improper combinations could damage the motor.

- Install appropriate devices for protecting the motor from overloads and short circuits:

Motor	Safety features
Single-phase	<ul style="list-style-type: none"> • Automatic reset thermal-ampere protection, in-built (motor protector) • From short circuit, by the installer: aM fuses (motor start-up), or thermal magnetic switch with C curve and $I_{cn} \geq 4.5 \text{ kA}$, or other similar device.
Three-phase	<ul style="list-style-type: none"> • Thermal, by the installer: trip class 10 A overload thermal relay + aM fuses (motor start-up), or start class 10 A motor protection thermal magnetic switch • From short circuit, by the installer: aM fuses (motor start-up), or thermal magnetic switch with C curve and $I_{cn} \geq 4.5 \text{ kA}$, or other similar device.

- If required, install phase failure sensitive thermal relays.

Motor protection from overtemperature

- Single-phase: the unit is equipped with built-in capacitor and thermal overload protection, and stops automatically in case of overtemperature. After 2-4 minutes the thermal overload protection gives the restart consent.
- Three-phase: Install an appropriate motor protector with D curve in the control panel, in accordance with the current shown in the data plate.

5 Use and operation

5.1 Precautions



DANGER: Electrical hazard

Do not use the unit in swimming pools or similar places when people are inside.



WARNING: Electrical hazard

Check that the unit is properly connected to the mains power supply.



DANGER: Injuries hazard

Do not insert your hands at the bottom of the unit when in operation: risk of personal injury caused by moving components.



WARNING: Injuries hazard

The unit, equipped with a single-phase motor with automatic reset thermal overload protection, could restart inadvertently after it has cooled down: risk of physical injury.



WARNING:

It is prohibited to put combustible materials near the unit.



WARNING:

Do not hold the unit by the handle during operation.



WARNING:

Make sure that the drained liquid cannot cause damage or injuries.

NOTICE:

In case of outdoor use, the length of the supply cord must exceed 10 m (33 ft).

NOTICE:

Dry run of the unit is forbidden.

NOTICE:

Make sure that the suction port is completely submerged in the liquid before start-up.

NOTICE:

The unit may only operate for a few minutes while only partially submerged in the liquid, for example during emptying operations.

See **Mechanical characteristics** on page 26.

If during the operation the unit is partially uncovered:



WARNING:

Be aware of the extreme heat generated by the unit.

5.2 Rotation direction check (three-phase motors)

1. Place the unit in the vertical position on a level and flat surface.
2. Looking at the unit from the top, start and then stop it immediately: the rotation direction is correct if the unit impulse movement at start-up tends to turn it clockwise. This means that the motor is turning clockwise as it should.



5.3 Starting and stopping

Float switch version

1. Connect the plug to the mains and/or turn on the switch: depending on the position of the float, the unit stays idle or starts to operate.
2. With the unit in operation, check that:
 - No liquid is leaking from the pipes
 - There is no unwanted noise or vibrations
 - There are no vortexes nearby the suction port
 - Liquid is actually being pumped.
3. When the float reaches the low position (minimum liquid level), the pump automatically stops.

Version without float switch

1. Connect the plug to the mains and/or turn on the switch: the unit starts.
2. With the unit in operation, complete the same checks as for the float version.
3. Once the unit has taken up liquid to the minimum level, disconnect the plug from the mains and/or turn off the switch to switch it off.

6 Maintenance

6.1 Precautions

Before starting, make sure that the instructions shown in **Introduction and Safety** on page 4 have been fully read and understood.



WARNING:

Maintenance must be done by a technician possessing the technical-professional requirements outlined in the current regulations.



WARNING:

Always wear personal protective equipment.



WARNING:

Always use suitable working tools.



DANGER: Electrical hazard

Before starting work, check that the unit is unplugged and that the pump unit, the control panel and the auxiliary control circuit cannot restart, even unintentionally.

6.2 Maintenance every 6 months of operation

1. Check the integrity of the supply cord; if the cable is damaged contact Xylem or the Authorised Distributor for its replacement.
2. Carefully clean the unit, particularly near the suction port.

6.3 Long periods of inactivity

1. Rinse the unit with soft water.
2. Empty the unit and the piping.
3. Put the unit out of service.
4. Protect the unit against freezing.

6.4 Spare parts ordering

Identify the spare parts with the product codes directly on the site www.lowara.com/spark. Contact Xylem or the Authorised Distributor for technical information.

7 Troubleshooting

7.1 Precautions



WARNING:

Maintenance must be done by a technician possessing the technical-professional requirements outlined in the current regulations.



WARNING:

Observe the safety requirements in the chapters on Use and Operation and Maintenance.



WARNING:

If a fault cannot be corrected or is not mentioned, contact Xylem or the Authorised Distributor.

7.2 The unit does not start

Cause	Remedy
Power supply cut off	Restore the power supply
Float low	Adjust the float
Fuses blown	Replace fuses
The thermal overload protection of the motor has been triggered	<ul style="list-style-type: none"> Reset the thermal overload protection on the control panel, and/or Check the liquid level, and/or Disconnect the electric power supply and wait 2 minutes before reconnecting it.
Supply cord is damaged	Contact Xylem or the Authorised Distributor for the replacement
Control panel faulty	Check and repair or replace the control panel

7.3 The thermal overload protection triggers

Cause	Remedy
High liquid temperature	Contact Xylem or the Authorised Distributor
Presence of solid or fibrous substances in the liquid (unit overload)	Remove the substances
It is calibrated at a value too low in relation to the rated current of the motor	Recalibrate
Input voltage outside the rated limits	Make sure the voltage values are correct
Unbalanced input voltage	Make sure the voltage of the three phases is balanced
Wrong working curve (flow rate below or above the permitted limits)	Bring the flow rate back within the permitted limits
Impeller seized	Contact Xylem or the Authorised Distributor
Motor turns in the wrong direction	Check the direction of rotation and change it if necessary
Motor or cable short circuit	Contact Xylem or the Authorised Distributor

7.4 The unit runs but there is little or no flow rate

Cause	Remedy
Tank liquid level too low	<ul style="list-style-type: none"> • Increase the installation depth, and/or • Adjust the float
Foreign bodies in the unit	Remove the foreign bodies
Discharge pipe throttled	Remove the throttling
Piping and/or unit clogged	Remove the clogging
Undersized unit	Contact Xylem or the Authorised Distributor

7.5 The unit never stops

Cause	Remedy
Motor turns in the wrong direction	Check the direction of rotation and change it if necessary
Float not adjusted correctly	Adjust the float
The float cannot move freely	Release the float
Float faulty	Contact Xylem or the Authorised Distributor
Undersized unit	Contact Xylem or the Authorised Distributor
Impeller worn	Contact Xylem or the Authorised Distributor

8 Technical Information

8.1 Applications

Applications	DOMO	DOMO VX	DOMO GRI
Drainage of flooded areas	•	•	•
Lowering of the underground water level	•	•	•
Draining wells	•	•	•
Emptying of rain water wells storing rain water from rooftops and gutters	•	•	•
Emptying of tanks and other containers	•	•	•
Pumping of domestic waste from sewage well or slurry treatment systems	•	•	•
Pumping of grey wastewater not from toilets	•	•	•
Pumping of grey wastewater from toilets	•	•	•
Pumping of wastewater or sewage water with suspended filaments		•	•
Movement of wastewater or sewage water in pressurized systems			•
Pumping wastewater or sewage water with suspended solids			•

8.2 Operating environment

Non-aggressive, non-explosive atmosphere, and not subjected to frost.

Temperature of pumped liquid

0 to 35°C (32 to 95°F).

NOTICE:

If the temperature exceeds the stated limits, contact Xylem or the Authorised Distributor.

Liquid pH

4 to 10.

Liquid density

≤ 1100 kg/m³ (9.2 lb/gal).

Liquid viscosity

≤ 10 mm²/s (10 cSt).

Suspended impurities

Series	Model	Maximum diameter, mm (in)
DOMO	7, S7, 7VX, S7VX	≤ 35 (1.4)
	10, 15, 20, 10VX, 15VX, 20VX	≤ 50 (2)
DOMO GRI	All	-

8.3 Maximum head

50 Hz

Series	Model	Head, m (ft)
DOMO	7CG, S7CG, 7T, S7T	10.7 (35)
	10CG, 10T	10.1 (33)
	15CG, 15T	12.7 (42)
	20T	14.8 (49)
	7VXCG, S7VXCG, 15VXCG, 7VXT, S7VXT, 15VXT	9.1 (30)
	10VXCG, 10VXT	7.7 (25)
	20VXT	11 (36)
DOMO GRI	11/A, 11T/A	25 (82)
	11HF, 11T HF	16.7 (55)
	15, 15T	29.0 (95)

60 Hz

Series	Model	Head, m (ft)
DOMO	S76CG, S76T	10.5 (34)
	106CG, 106T	8.8 (29)
	156CG, 156T	12.4 (41)
	206T	14.5 (48)
	S76VXCG, S76VXT	8 (26)
	106VXCG, 106VXT	7.4 (24)
	156VXCG, 156VXT	10 (33)
	206VXT	11.8 (39)
DOMO GRI	116T	28.9 (95)

8.4 Maximum number of starts per hour

25.

8.5 Mechanical characteristics

Electric supply cord length

10 m (33 ft)

DOMO S7: 5 m (16 ft), 10 m (33 ft) on request.

Minimum pumped liquid level

NOTICE:

Make sure that the suction port is completely submerged in the liquid before start-up.

Series	Model	Version				Minimum level of the unit support base, mm (in)
		CG	SG	GT	T	
DOMO	7, S7	•	•	•	•	55 (2.2)
	10, 15, 20	•	•	•	•	70 (2.8)
	7VX, S7VX	•	•		•	90 (3.5)
	10VX, 15VX, 20VX	•	•		•	115 (4.5)
DOMO GRI	11, 15	•	•		•	110 (4.3)

Maximum immersion depth

5 m (16 ft)

NOTICE:

The supply cord must be at least 3 m (10 ft) out of the liquid.

Protection class

IPX8.

8.6 Electrical specifications

Permitted tolerances for the supply voltage

Frequency Hz	Phase ~	No. of conductors + earth	UN, V ± %
50	1	2 + 1	220-240 ± 6
	3	3 + 1	230/400 ± 10
60	1	2 + 1	220-230 ± 6
	3	3 + 1	220/380 ± 5

8.7 Sound pressure

Unit position	LpA sound pressure level measured in free field at a distance of one metre, dB ± 2
Submerged	Non-applicable
Partially submerged	< 70

8.8 Dimensions and weights


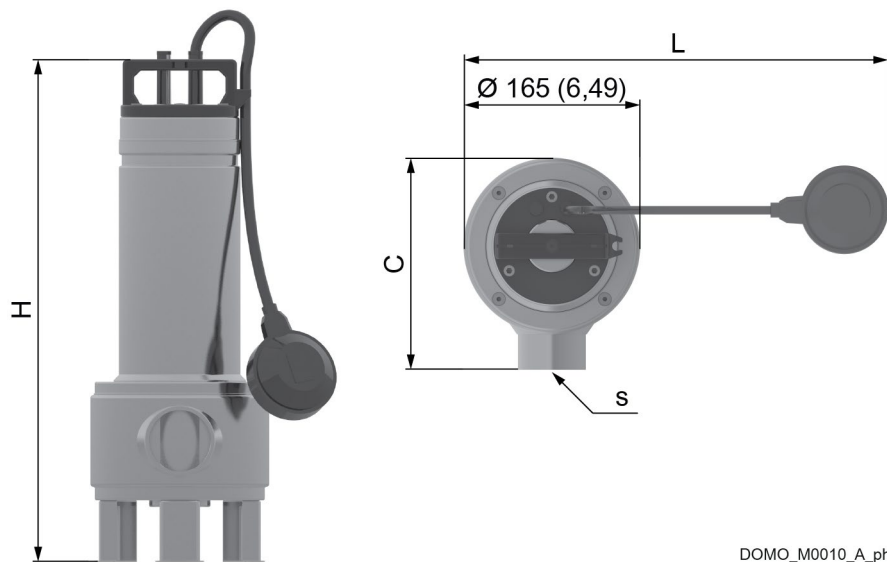


Figure 5: DOMO


DOMO_M0010_A_ph

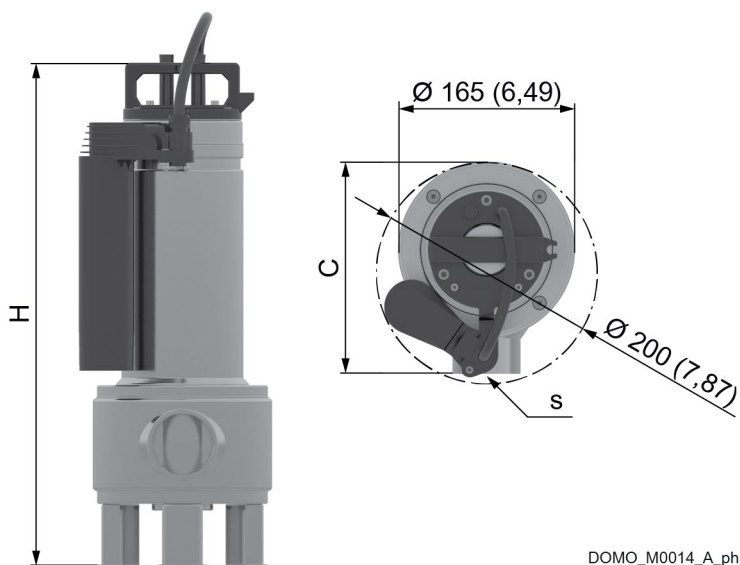

DOMO_M0014_A_ph

Figure 6: DOMO GT

Model	H, mm (in)	C, mm (in)	L, mm (in)	s, in	Weight, kg (lb)
7, 7VX, 7 GT, 7VX GT	391 (15.39)	193 (7.59)	420 (16.53)	Rp 1 ½	10.2 (22.5)
7T, 7VXT	391 (15.39)	193 (7.59)	-	Rp 1 ½	8.9 (19.6)
10, 10VX, 10 GT, 10VX GT	468 (18.43)	198 (7.79)	495 (19.49)	Rp 2	13.6 (30)
10T, 10VXT	438 (17.24)	198 (7.79)	-	Rp 2	11.6 (25.6)
15, 15VX, 15 GT, 15VX GT	468 (18.43)	198 (7.79)	495 (19.49)	Rp 2	15.3 (33.7)
15T, 15VXT	468 (18.43)	198 (7.79)	-	Rp 2	13.6 (30)
20T, 20VXT	468 (18.43)	198 (7.79)	-	Rp 2	14.6 (32.2)

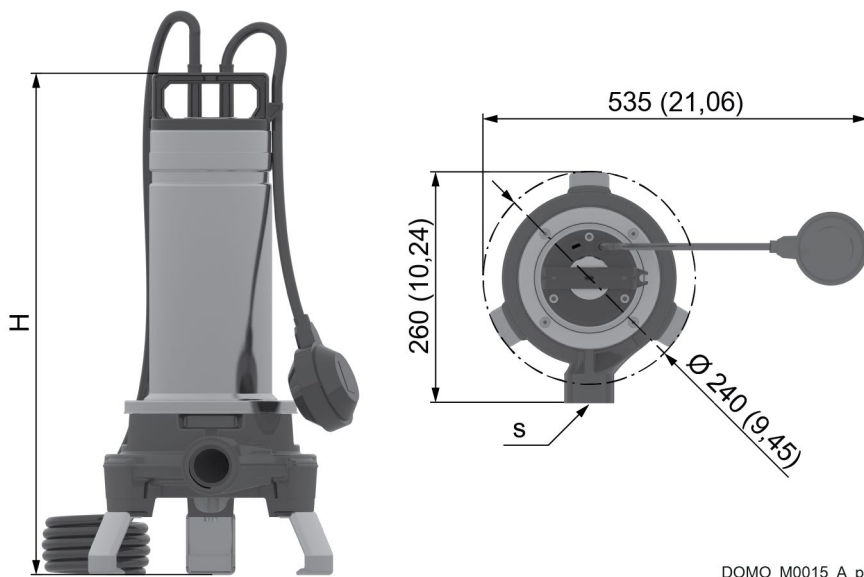

DOMO_M0015_A_ph

Figure 7: DOMO GRI

Model	H, mm (in)	s, in	Weight, kg (lb)
GRI 11/A	442 (17.40)	Rp 1	20.8 (46)
GRI 11/A SG	442 (17.40)	Rp 1	20.6 (45)
GRI 11T/A	442 (17.40)	Rp 1	20.1 (44)
GRI 11HF	444 (17.48)	Rp 1 ¼	20.8 (46)
GRI 11HF SG	444 (17.48)	Rp 1 ¼	20.6 (45)
GRI 11T HF	444 (17.48)	Rp 1 ¼	20.1 (44)
GRI 15	462 (18.19)	Rp 1 ¼	23 (51)
GRI 15 SG	462 (18.19)	Rp 1 ¼	22.8 (50)
GRI 15T	442 (17.40)	Rp 1 ¼	22.3 (49)

9 Disposal

9.1 Precautions



WARNING:

The unit must be disposed of through approved companies specialised in the identification of different types of materials (steel, copper, plastic, etc.).



WARNING:

It is prohibited to dispose of lubricating fluids and other hazardous substances in the environment.

10 Declarations

10.1 EC Declaration of Conformity (Original)

Xylem Service Italia S.r.l., with headquarters at Via Vittorio Lombardi 14 - 36075 Montecchio Maggiore VI - Italy, hereby declares that the product:

Pump unit (see the label on the Safety and Other Information manual)

fulfils the relevant provisions of the following European Directive:

- Machinery 2006/42/EC (ANNEX II - natural or legal person authorised to compile the technical file: Xylem Service Italia S.r.l. - Via Vittorio Lombardi 14 36075 Montecchio Maggiore VI - Italy)

and the following technical standards:

EN 809:1998+A1:2009, EN 60335-1:2012+A11:2014,
EN 60335-2-41:2003+A1:2004+A2:2010¹, EN 62233:2008

Montecchio Maggiore, 12/06/2018

Amedeo Valente
(Director of Engineering and R&D)



rev.01

10.2 EU Declaration of Conformity (n. EMCD30)

1. Apparatus model/Product:
see the label on the Safety and Other Information manual
2. Name and address of the manufacturer:
Xylem Service Italia S.r.l.
Via Vittorio Lombardi 14
36075 Montecchio Maggiore VI
Italy
3. This declaration of conformity is issued under the sole responsibility of the manufacturer.
4. Object of the declaration:
Pump unit
5. The object of the declaration described above is in conformity with the relevant Union harmonization legislation:
2014/30/EU Directive of 26 February 2014 (electromagnetic compatibility)
6. References to the relevant harmonized standards used or references to the other technical specifications, in relation to which conformity is declared:
EN 61000-6-1:2007, EN 61000-6-3:2007+A1:2011
7. Notified body: -
8. Additional information: -

Signed for and on behalf of: Xylem Service Italia S.r.l.

Montecchio Maggiore, 12/06/2018

Amedeo Valente
(Director of Engineering and R&D)



rev.01

Lowara is a trademark of Xylem Inc. or one of its subsidiaries.

¹ Except section 25.8 for models with supply cords of less than 10 m (33 ft)

11 Warranty

11.1 Information

For information on the warranty refer to the documentation of the sale contract.

Xylem |'zīləm|

- 1) The tissue in plants that brings water upward from the roots;
- 2) A leading global water technology company.

We're a global team unified in a common purpose: creating innovative solutions to meet our world's water needs. Developing new technologies that will improve the way water is used, conserved, and re-used in the future is central to our work. We move, treat, analyze, and return water to the environment, and we help people use water efficiently, in their homes, buildings, factories and farms. In more than 150 countries, we have strong, long-standing relationships with customers who know us for our powerful combination of leading product brands and applications expertise, backed by a legacy of innovation.

For more information on how Xylem can help you, go to www.xylem.com



Xylem Service Italia S.r.l.
Via Vittorio Lombardi 14
36075 - Montecchio Maggiore (VI) - Italy
www.xylem.com/brands/lowara

Lowara is a trademark of Xylem Inc. or one of its subsidiaries.
© 2019 Xylem, Inc. Cod.001082034EN rev.A ed.01/2019